

Technical data sheet

DR24A-7

Rotary actuator for butterfly valves

- Nominal torque Max. 90 Nm (not constant)
- Nominal voltage AC/DC 24 V
- Control Open-close



Technical data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 19.228.8 V
	Power consumption in operation	4 W
	Power consumption in rest position	2 W
	Power consumption for wire sizing	6 VA
	Connection supply / control	Cable 1 m, 3 x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Nominal torque	Max. 90 Nm (not constant)
	Manual override	with push-button, can be locked
	Running time motor	150 s / 90°
	Sound power level, motor	45 dB(A)
	Position indication	Mechanically (integrated)
Safety	Protection class IEC/EN	III Safety Extra-Low Voltage (SELV)
	Protection class UL	UL Class 2 Supply
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2, UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Certification UL	cULus according to UL60730-1A, UL60730-2- 14 and CAN/CSA E60730-1:02
	Mode of operation	Type 1
	Rated impulse voltage supply / control	0.8 kV
	Control pollution degree	3
	Ambient temperature	-3050°C
	Non-operating temperature	-4080°C
	Ambient humidity	Max. 95% r.h., non-condensing
	Maintenance	Maintenance-free
Mechanical data	Connection flange	F07
Weight	Weight	4.2 kg

Safety notes



• This device has been designed for use in stationary heating, ventilation and air conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

- Outdoor application: only possible in case that no (sea)water, snow, ice, insolation
 or aggressive gases interfere directly with the actuator and that is ensured that the
 ambient conditions remain at any time within the thresholds according to the data
 sheet.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of rotation may not be adjusted.
- The angle of rotation is not permitted to be subjected to mechanical limitation. It is forbidden to alter the mechanical end stops.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.



 of as household refuse. All locally valid regulations and requirements must be observed. Because of its non-constant torque, the actuator is neither suitable nor released for motorisation with valves from other manufacturers. No legal entitlement can be claimed, even after extensive testing. Belimo will not be held liable and will provid no warranty. Product features Simple direct mounting Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments. Manual override Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked). High functional reliability The actuator is overload protected, requires no limit switches and automatically stop when the end stop is reached. Combination valve/actuator For valves with the following mechanical specifications in accordance with ISO 521 FO? Square stem head SW = 17 mm for form-fit coupling of the rotary actuator. Hole circle d = 70 mm Due to the non linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures. Image and not for other armatures. 	Safety notes	
Simple direct mounting Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments. Manual override Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked). High functional reliability The actuator is overload protected, requires no limit switches and automatically stop when the end stop is reached. Combination valve/actuator For valves with the following mechanical specifications in accordance with ISO 521: F07: • Square stem head SW = 17 mm for form-fit coupling of the rotary actuator. • Hole circle d = 70 mm Torque not constant Due to the non linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures. Image: provide the outer of the ou		 The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed. Because of its non-constant torque, the actuator is neither suitable nor released for motorisation with valves from other manufacturers. No legal entitlement can be claimed, even after extensive testing. Belimo will not be held liable and will provide
 Manual override Manual override Manual override Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked). High functional reliability The actuator is overload protected, requires no limit switches and automatically stop when the end stop is reached. Combination valve/actuator For valves with the following mechanical specifications in accordance with ISO 521 F07: Square stem head SW = 17 mm for form-fit coupling of the rotary actuator. Hole circle d = 70 mm Torque not constant Due to the non linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures. 	Product features	
 High functional reliability High functional reliability The actuator is overload protected, requires no limit switches and automatically stop when the end stop is reached. Combination valve/actuator For valves with the following mechanical specifications in accordance with ISO 521 F07: Square stem head SW = 17 mm for form-fit coupling of the rotary actuator. Hole circle d = 70 mm Torque not constant Due to the non linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures. 	Simple direct mounting	Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments.
when the end stop is reached. Combination valve/actuator For valves with the following mechanical specifications in accordance with ISO 521 Fo7: - Square stem head SW = 17 mm for form-fit coupling of the rotary actuator. - Hole circle d = 70 mm Torque not constant Due to the non linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures. $\begin{bmatrix} Nm \end{bmatrix}$ 0^{0}	Manual override	Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).
F07: - Square stem head SW = 17 mm for form-fit coupling of the rotary actuator. - Hole circle d = 70 mm Torque not constant Due to the non linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures. $\int_{0}^{10} \int_{0}^{10} \int_{0}^{$	High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
valves and not for other armatures.	Combination valve/actuator	- Square stem head SW = 17 mm for form-fit coupling of the rotary actuator.
	Torque not constant	
Accessories	Accessories	

	Description	Туре
Electrical accessories	Auxiliary switch, add-on, 1 x SPDT	S1A
	Auxiliary switch, add-on, 2 x SPDT	S2A
	Feedback potentiometer 140 Ohm, add-on	P140A
	Feedback potentiometer 200 Ohm, add-on	P200A
	Feedback potentiometer 500 Ohm, add-on	P500A
	Feedback potentiometer 1 kOhm, add-on	P1000A
	Feedback potentiometer 2.8 kOhm, add-on	P2800A
	Feedback potentiometer 5 kOhm, add-on	P5000A
	Feedback potentiometer 10 kOhm, add-on	P10000A

E

<u>[</u>

Notes


• Connection via safety isolating transformer.



Electrical installation


Wiring diagrams


AC/DC 24 V, open-close

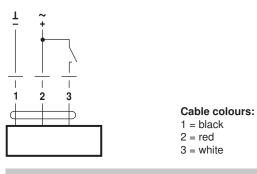

Dimensions [mm]

Dimensional drawings

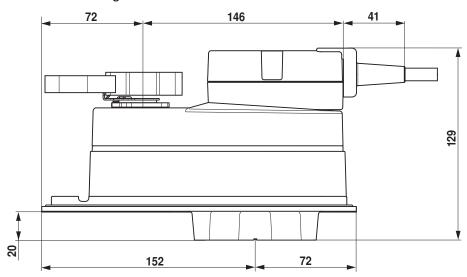

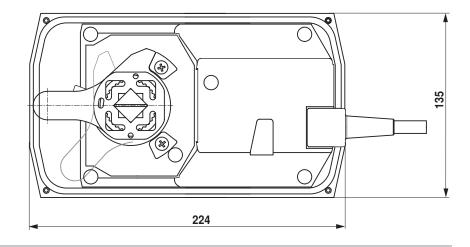

Further documentation

- Overview Valve-actuator combinations
- Data sheets for butterfly valves
- · Installation instructions for actuators and/or butterfly valves
- General notes for project planning